USER MANUAL

30-inch Round Firepit





PLEASE READ ALL RULES FOR SAFE OPERATION AND HELPFUL HINTS BEFORE USING.



WARNING: FUELS USED IN WOOD OR CHARCOAL BURNING APPLIANCES, AND THE PRODUCTS OF COMBUSTION OF SUCH FUELS, CAN EXPOSE YOU TO CHEMICALS INCLUDING CARBON BLACK. WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, AND CARBON MONOXIDE, WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. For more information go to: www.P65Warnings.ca.gov

Attention: This instruction contains important safety information, please read it carefully and keep it for future reference.



NOREAST OUTDOORS
11 JONATHAN BOURNE DRIVE
POCASSET, MA 02559
NOREAST-OUTDOORS.COM


Attention:

- Keep the outdoor firepit assembled in a cool, dry location away from children and pets.
- During the assembly, please be wary of sharp corners and edges of the metal parts, it is recommended to wear protective gloves during assembling.
- Please check the number and condition of the parts according to the parts list. If any parts are defective or missing, please contact us at once.
- It is kindly advised to assemble the product on a carpet to protect your floor from being scratched.
- For the purpose of a time-saving and hassle-free assembly, please act in compliance with the step-by-step instructions. Any unauthorized modification to this item will void its warranty.
- Please check the tightness of all connections of parts periodically.
- The seller bears no responsibility and/or liability for any personal injury and/or property damage arising from improper use or incorrect assembly of the firepit.
- How to use firepit tools:
 - **a**. Use the long-handled firepit tool to remove spark guard by wearing heat-resistant gloves.
 - b. Don't add any additional wood until embers are lit.
 - **c**. Place additional wood on top of lit embers carefully and ensure there are gaps among embers and wood. (Only dry and seasoned hardwood should be used)
 - **d**. Poke coals and logs to increase airflow with the firepit tool.
 - e. Put back spark guard with the firepit tool by wearing heat-resistant gloves.

Parts List

Check to see if all parts and hardware are included as shown below. Any part missing, please feel free to contact us.


Note: There is no need to disquiet about excess hardware parts after correct assembly, just keep them for repairing or replacement.

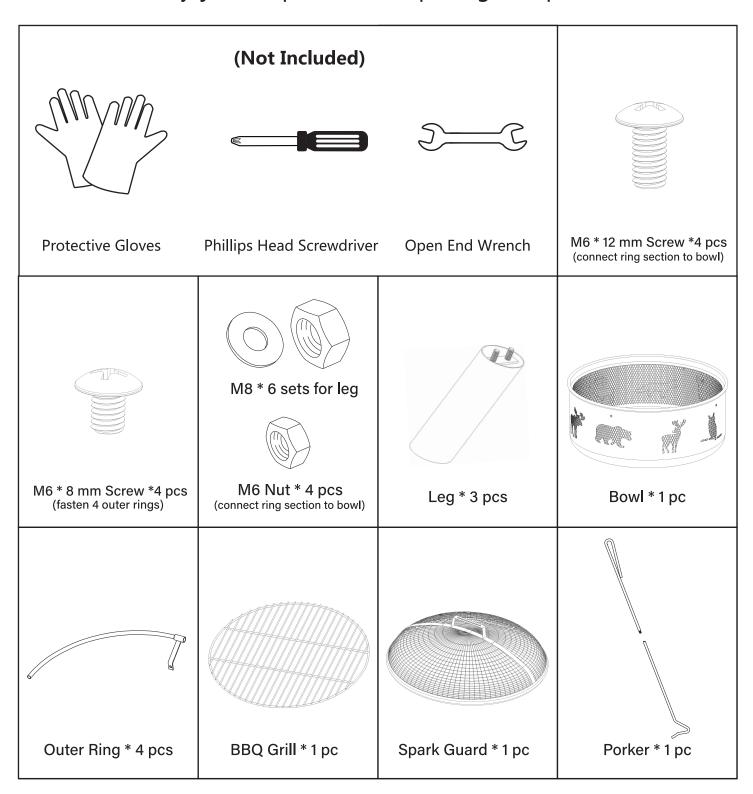

Assembly Steps


Step 1

Attach 3 Legs to Bowl with 6 Screws and 6 flat washers.

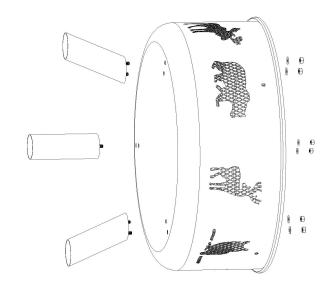

Step 2

Use 1 Screw and 1 Nut to attach 1 Outer Ring to Bowl, then interlock 4 Outer Rings to each other and use 3 Screws and 3 Nuts to attach them to Bowl.

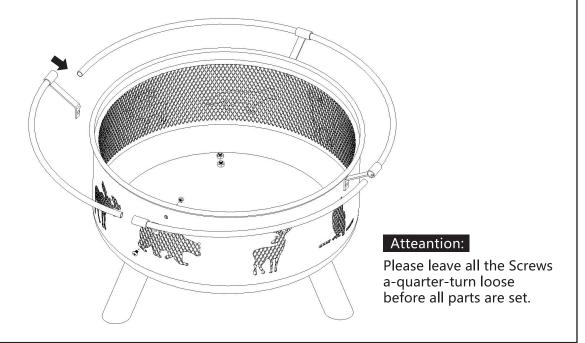

Assembly Steps


Step 3

Use 4 Screws to fasten 4 Outer Rings.



Step 4

Place BBQ Grill and Spark Guard on Bowl.

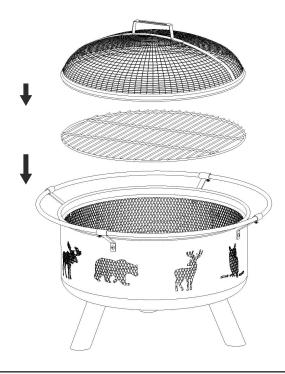

Assembly Steps

Step 5 Complete Tip: Poker is recommended if you want to remove Spark Guard when it's not cooled down completely.

Care and Maintenance

- Don't use charcoal briquettes, drift wood, manufactured logs, trash, leaves, paper, plywood, pine, cedar, gasoline, kerosene, diesel fuel, lighter fluid or alcohol to light the fire.
- Don't use firepit on or around flammable objects, such as wood, plastic, etc. or near a side wall.
- Don't place the firepit near the fire or heat sources to avoid fire accident.
- Don't place hot firepit tools onto combustible objects such as grass, wooden furniture.
- Don't allow children to operate the firepit, don't leave children and pets alone around a lit firepit, keep a safe distance when in use.
- Don't overload the firepit. If any part of the firepit starts to turn red, that means it is overloaded.
- Please remove and dispose of the ashes properly after the fire is out and outdoor firepit is cool, don't put out fire with water.
- This appliance is applied to outdoor area only and should not be used in a building, garage, or any other enclosed area. Please keep the product away from the wind and rain, don't bump or cast it.
- Don't use corrosive cleaners for cleaning.



READ FIRST! RULES FOR THE SHOOTING STARS OUTDOOR FIRE PIT SAFE OPERATION.

- THIS FIRE PIT IS FOR OUTDOOR USE ONLY!
- USE ONLY ON BRICK, CONCRETE, STONE OR OTHER MASONRY SURFACES!
- DO NOT USE ON LAWNS, WOODEN DECKS, COMPOSITE DECKS, ASPHALT OR ANY COMBUSTIBLE SURFACE.
- KEEP THE FIRE PIT A MINIMUM OF 10 FT. AWAY FROM BUILDINGS, STRUCTURES, ANY FLAMMABLE ITEMS AND VEHICLES.
- NEVER USE UNDER LOW HANGING TREE BRANCHES, TRELLIS, OVERHANGS OF ANY KIND INCLUDING COVERED PORCHES.
- WARNING! NEVER USE GASOLINE, ALCOHOL OR VOLATILE FLUIDS TO START OR RESTART FIRES.
- DO NOT USE THE OUTDOOR FIRE PIT WHILE IMPAIRED BY ALCOHOL OR ANY OTHER SUBSTANCE.
- FOR LONGER PRODUCT LIFE, KEEP FIRES TO A RESPECTABLE SIZE, DO NOT OVERLOAD.
- DO NOT THROW FIREWOOD INTO THE FIRE PIT, ADD FIREWOOD BY CAREFULLY PLACING INTO THE FIREBOWL.
- THE OUTDOOR FIRE PIT IS FOR ADULT USE ONLY.
- ADULTS NEED TO KEEP WATCH AND SUPERVISE CHILDREN AND PETS WHEN AROUND THE FIRE PIT DURING USE.
- AVOID BEHAVIOR THAT COULD CAUSE THE FIRE PIT TO TIP OVER.
- · KEEP LOOSE CLOTHING AWAY.
- DO NOT LEAVE UNATTENDED AT ANY TIME WHILE IN USE.
- DO NOT MOVE THE FIRE PIT DURING USE.
- · DO NOT USE IN WINDY CONDITIONS!
- DO NOT OVERLOAD OR USE FOR BURNING GARBAGE.
- USE CAUTION WHEN TENDING THE FIRE, AS SURFACES WILL BECOME VERY HOT WHILE IN USE.
- · ALWAYS USE THE SPARK GUARD DURING USE.
- USE MITTENS OR GLOVES WITH THE POKER TO REMOVE THE SPARK GUARD, THE SPARK GUARD WILL BECOME VERY HOT!
- USE CAUTION WHEN REMOVING THE SPARK GUARD, AS HOT STEAM OR A FLARE UP COULD CAUSE BURNS.
- BEFORE EACH USE MAKE SURE THE FIRE PIT IS IN GOOD WORKING CONDITION.
- USE CAUTION AFTER THE FIRE HAS BEEN EXTINGUISHED, SURFACES WILL REMAIN HOT FOR SOME TIME.
- THE FIRE PIT MUST BE COMPLETELY COOLED OFF AND ALL EMBERS MUST BE EXTINGUISHED BEFORE ANY COVER CAN BE USED.
- · CHECK LOCAL LAWS AND CODES BEFORE USING.







WARNING! CARBON MONOXIDE HAZARD! DO NOT BURN IN ENCLOSED AREAS!

BURNING WOOD OR CHARCOAL PRODUCES CARBON MONOXIDE, WHICH HAS NO ODOR AND CAN CAUSE DEATH IF BURNED IN ENCLOSED AREAS. NEVER BURN WOOD OR CHARCOAL INSIDE HOMES, VEHICLES, TENTS OR ANY OTHER ENCLOSED AREAS.

HELPFUL HINTS:

- KEEP THE FIRE PIT OUT OF THE WEATHER AND ELEMENTS.
- STORE THE FIRE PIT IN A DRY LOCATION OUT OF THE WEATHER.
- DO NOT DUMP ASHES WHERE A FIRE CAN BE STARTED.
- DISPOSE OF ASHES IN PROPER RECEPTACLE ONLY AFTER ASHES HAVE COOLED.
- USE ANY COVER ONLY AFTER THE FIRE PIT IS COMPLETELY COOL TO THE TOUCH.
- STORE THE FIRE PIT IN AN AREA SO THAT IT WON'T BE PRONE TO TIPPING OVER AND BEING A HAZARD.

CLEANING

For best results, the fire pit should be cleaned after every use. Make sure fire pit is cool and all embers are extinguished before cleaning.

If any remaining firewood needs to be removed, use poker or shovel to remove. Any sand can be reused.

Dispose of ashes in proper receptacle only after ashes have cooled. Do not dump ashes where a fire can be started.

If the fire pit needs to be cleaned, use a mild soap and water with a soft rag. Dry thoroughly to prevent rust.

Occasionally, the fire pit finish will need to be refinished. Use a high quality, high heat paint to renew the finish.



11 JONATHAN BOURNE DRIVE POCASSET, MA 02559 NOREAST-OUTDOORS.COM