

## UNFOLD THE CHAIR

1. Take out the chair from the carry bag.



2. Pull each chair leg base outward to release it from the clip on the frame.



3. With chair legs resting on the ground, push down on the seat while applying pressure to the backrest to fully unfold the chair.



4. Press both armrests at the same time to ensure the chair is fully in place.



## FOLD THE CHAIR


1. Pull up on the seat fabric and push back toward backrest.



2. Fold the chair frame down toward the leg bases.



3. Press the frame to ensure leg bases clip into the chair frame.

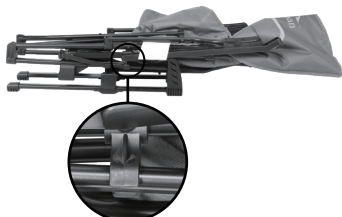

4. Put the chair back into the carry bag.



FRONT

170mm



L.L.Bean

EASY COMFORT CAMP ROCKER  
INSTRUCTION MANUAL



300  
LB  
136 KG  
WEIGHT CAPACITY

250mm



GRAYSCALE