


L.L.Bean

ASSEMBLY INSTRUCTIONS

Rustic Wooden Hall Console Table

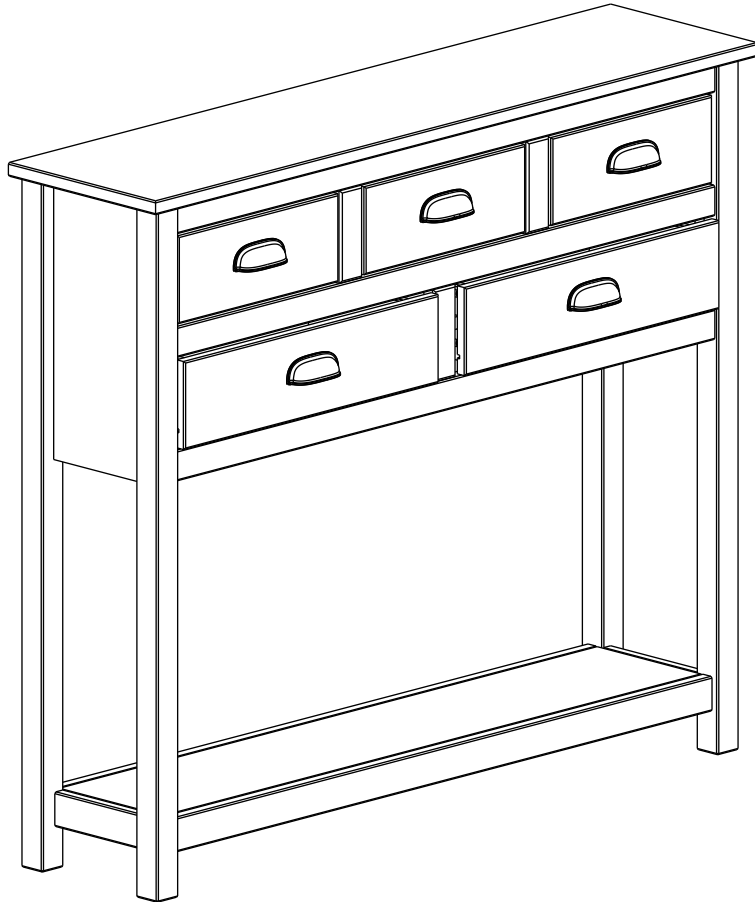


HARDWARE




A - 8.0x30mm Wood Dowel
Qty. 08




B - 4.0x30 Screw
Qty. 18

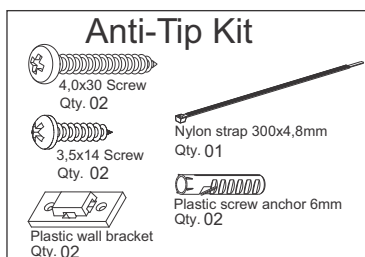

Tools Required




Phillips Tool

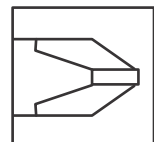


REPLACEMENT PARTS

Order replacement parts and hardware at www.llbean.com

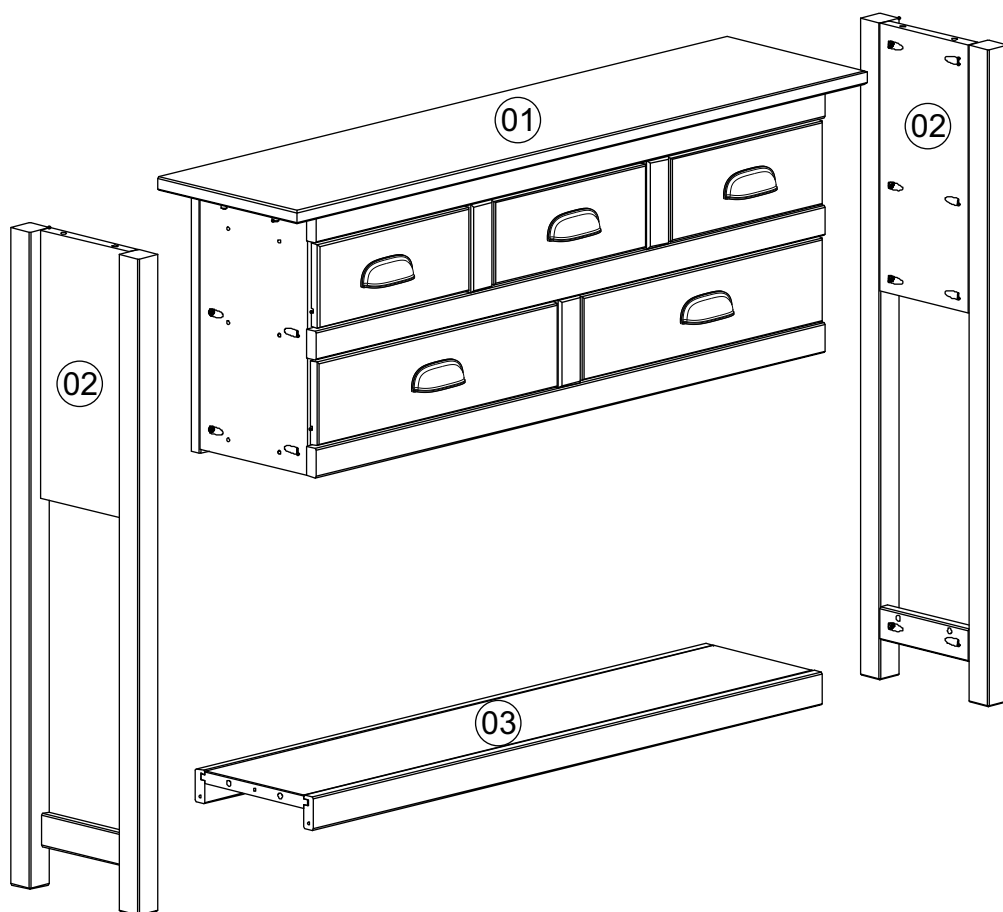


STEP 1


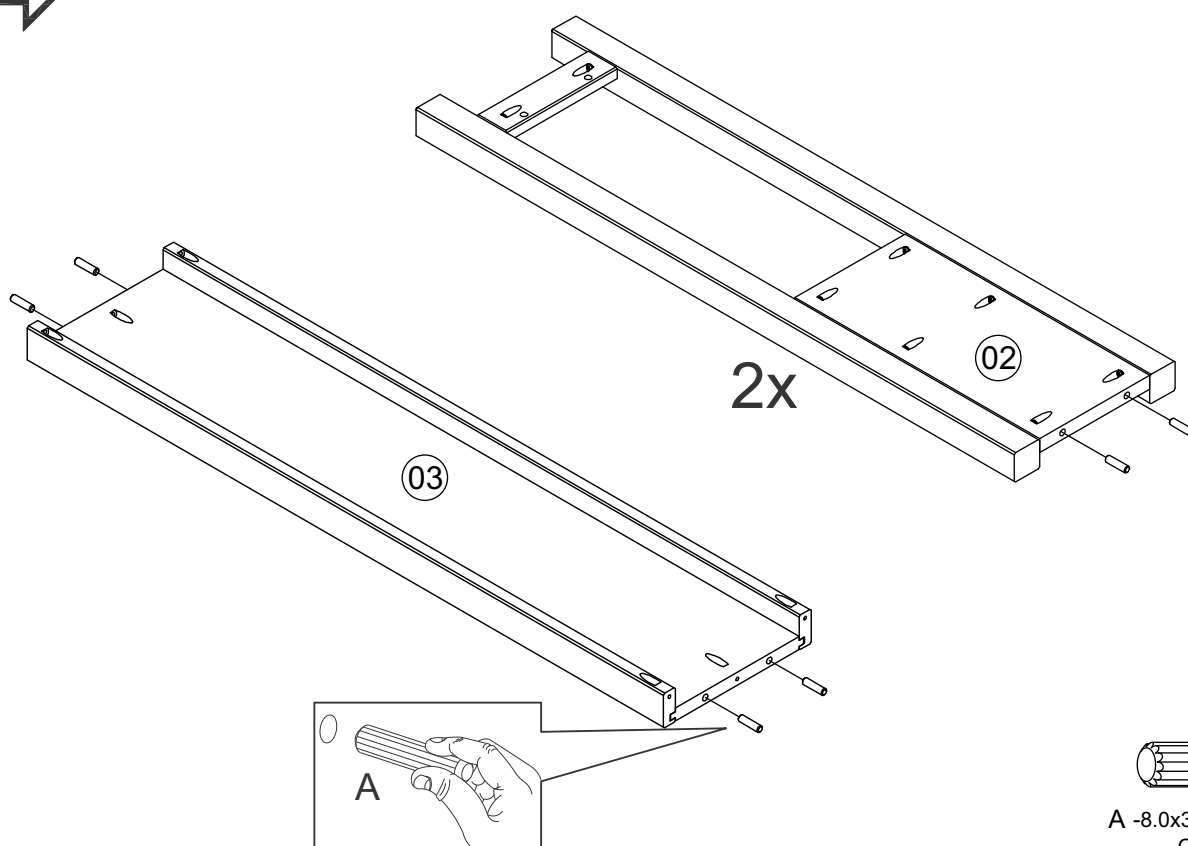


STEP 2



Remove the drawers in order to have clearance for the next step.

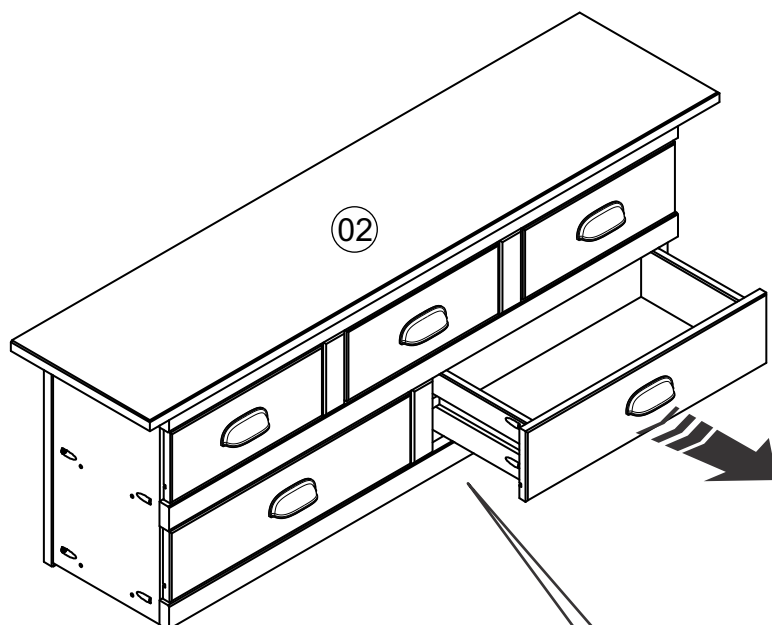

The drawer bottom has 2 drawer stop. Press both stop up simultaneously as per the detail below and pull the drawer out.

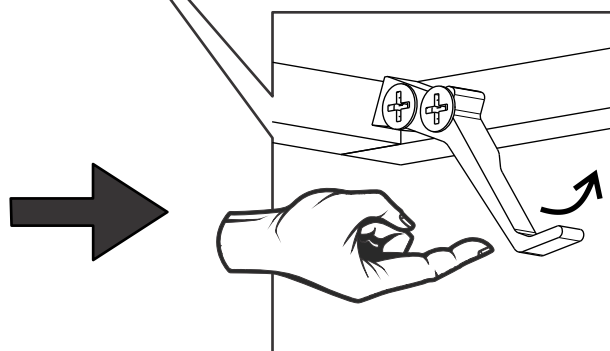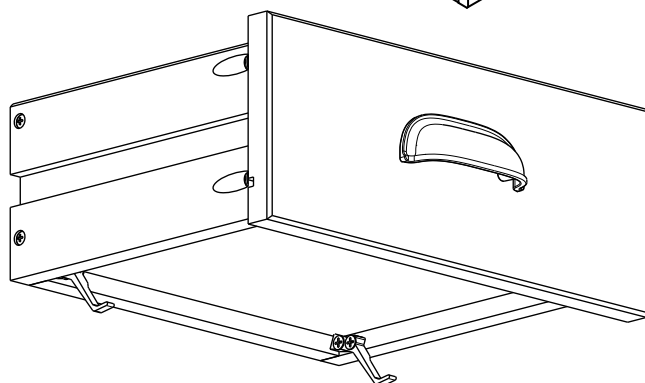


STEP 3

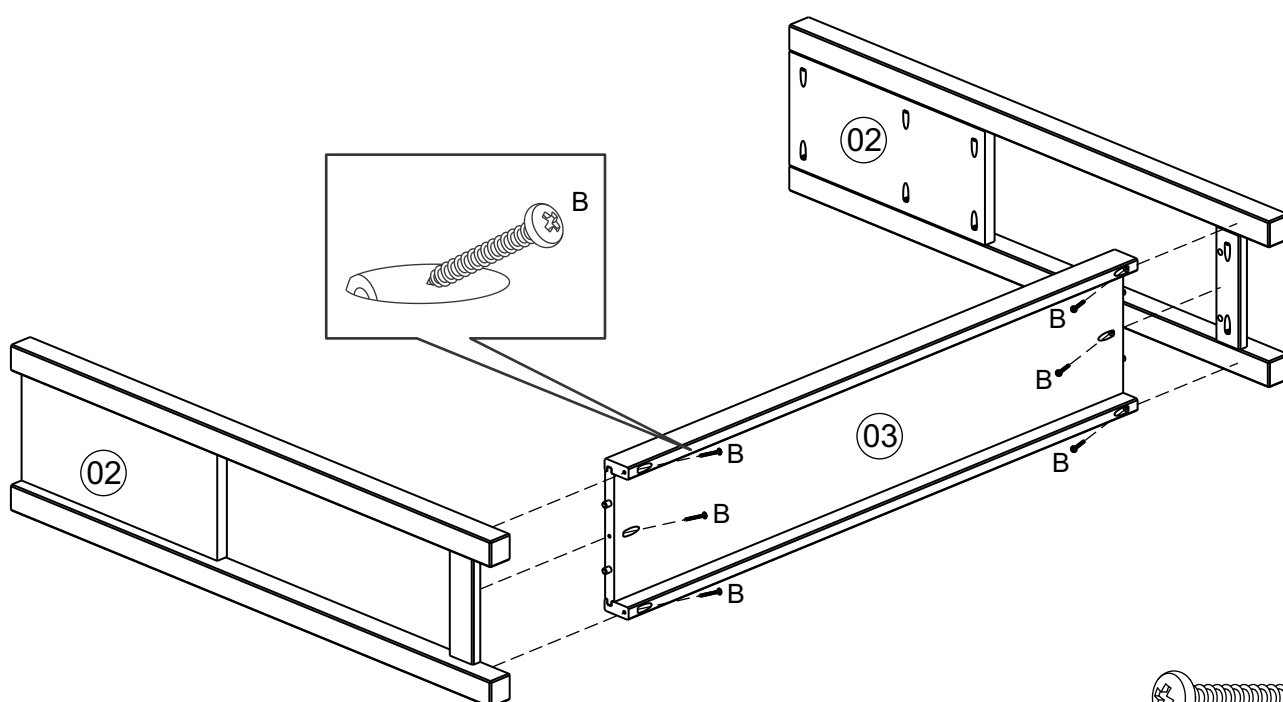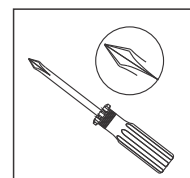


B - 4,0x30 Screw
Qty. 06

STEP 4

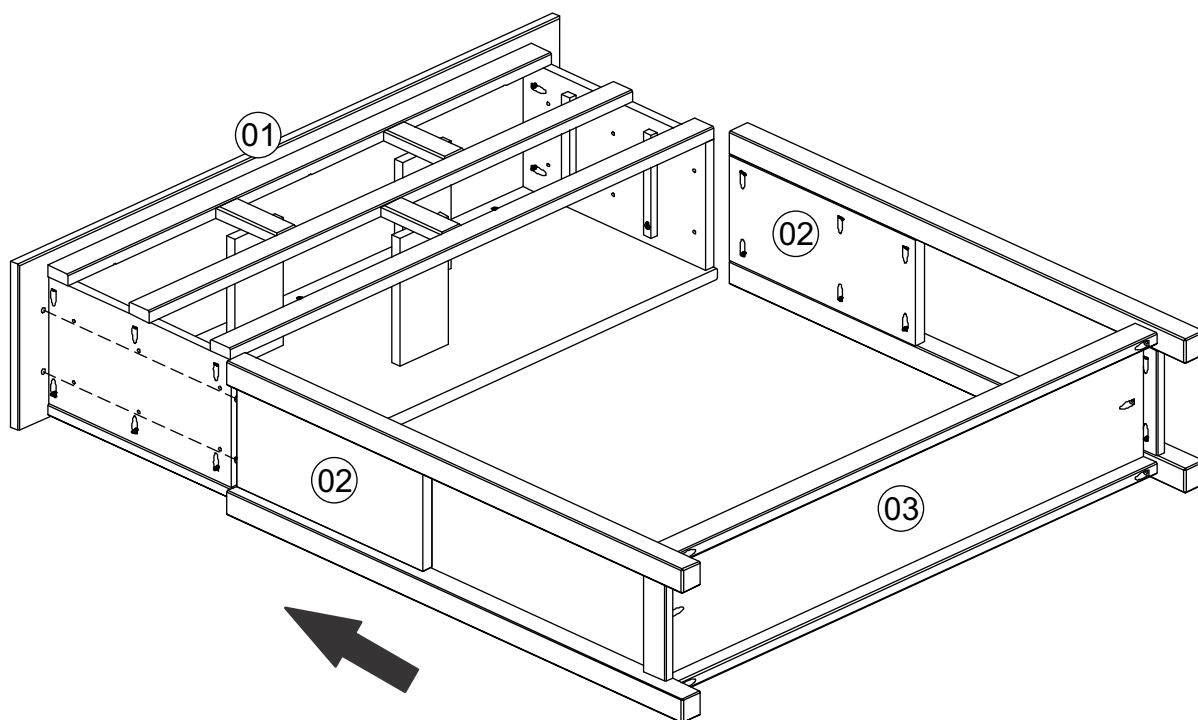


STEP 5

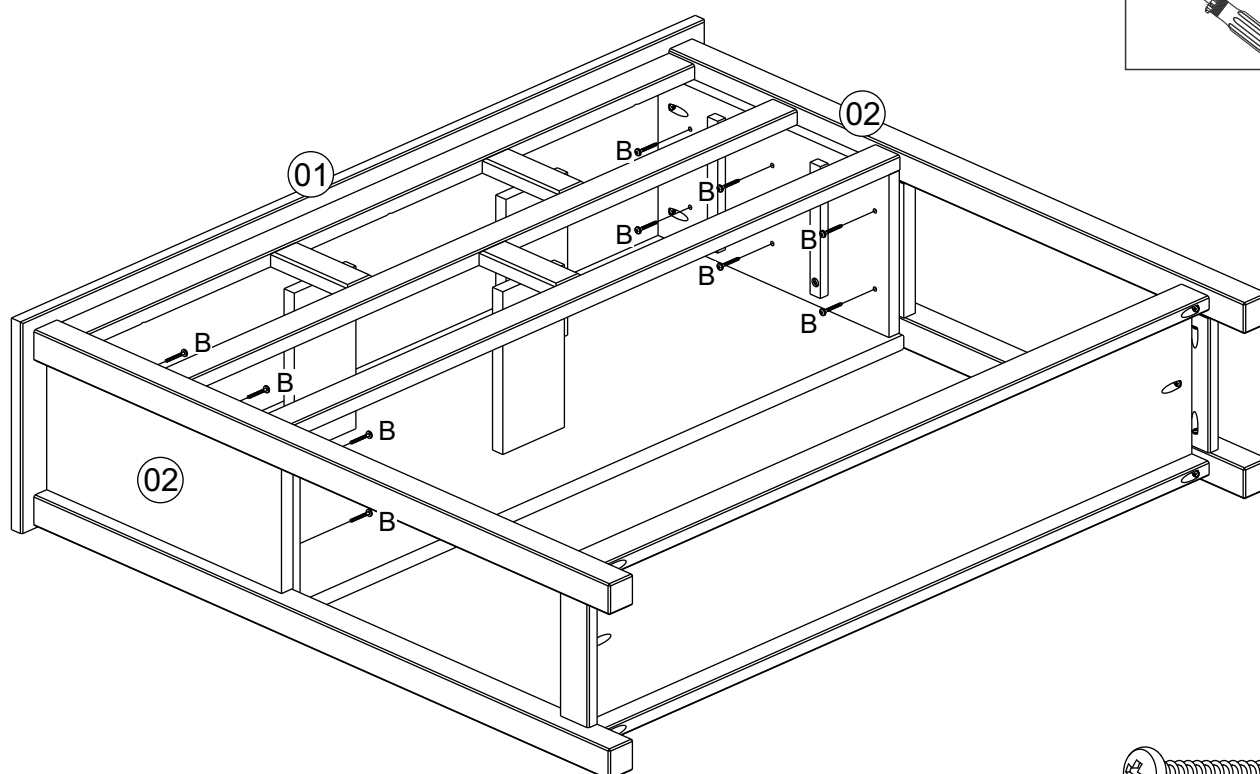





B - 4,0x30 Screw
Qty. 12

STEP 8

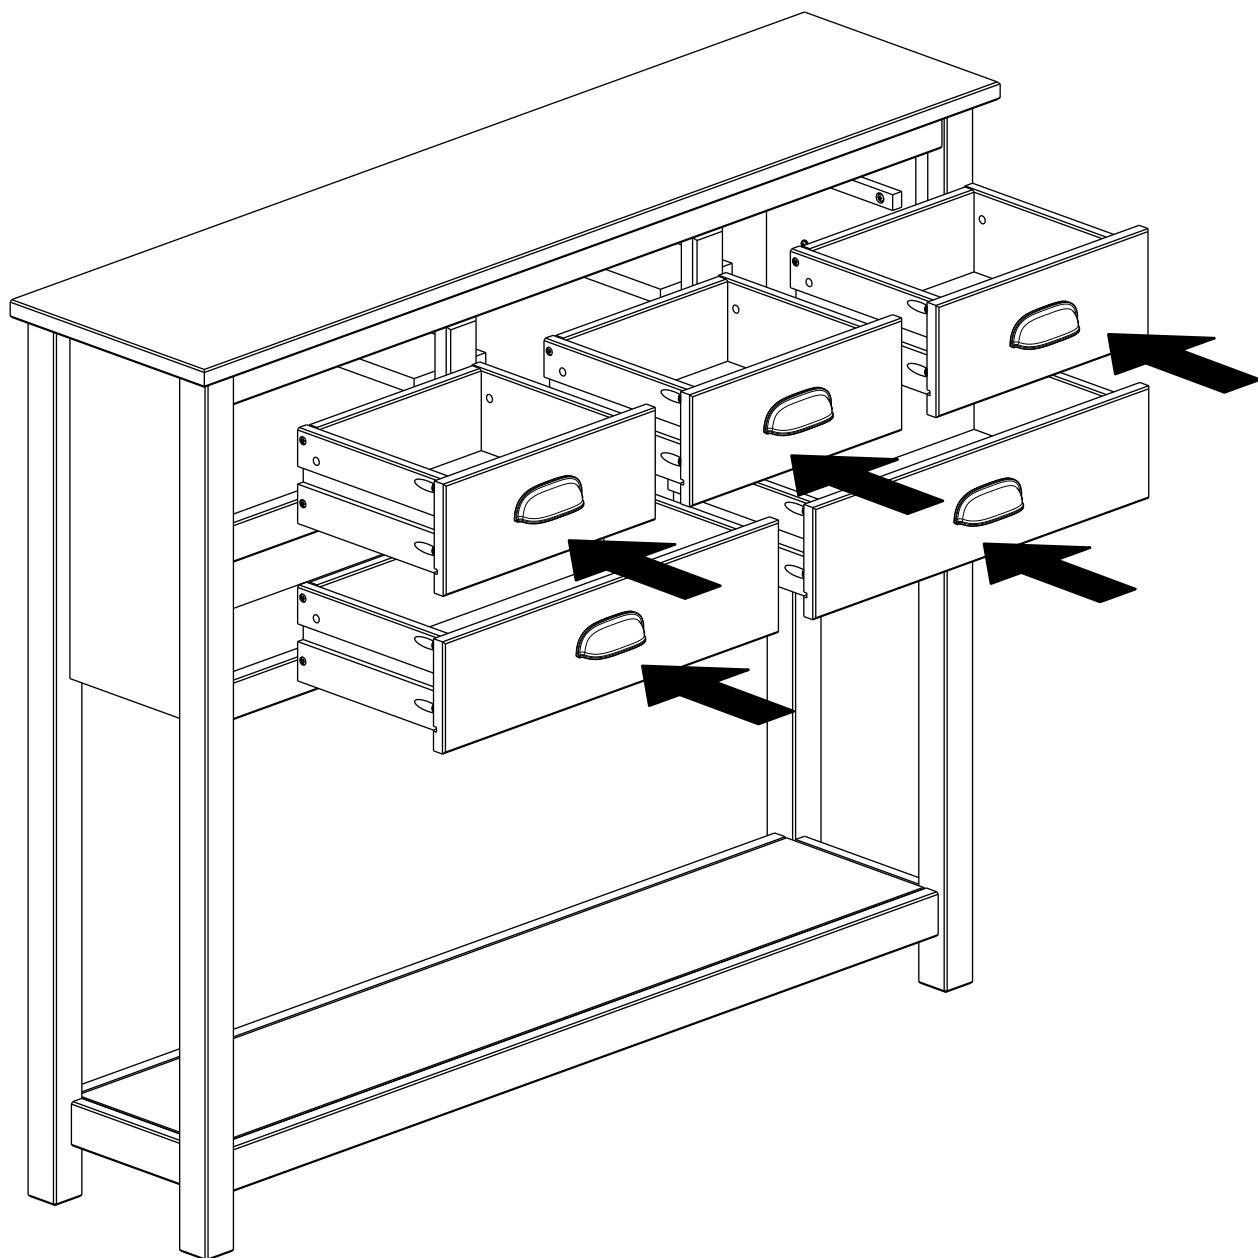

Anti-Tip Kit

Secure to Stud behind Wallboard.

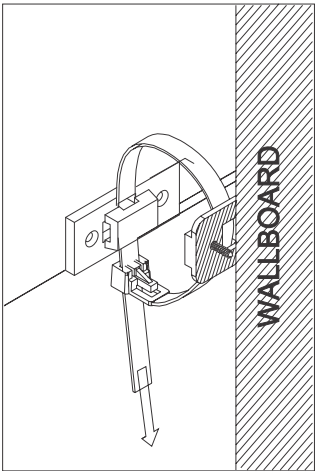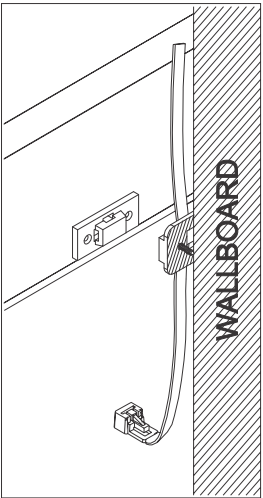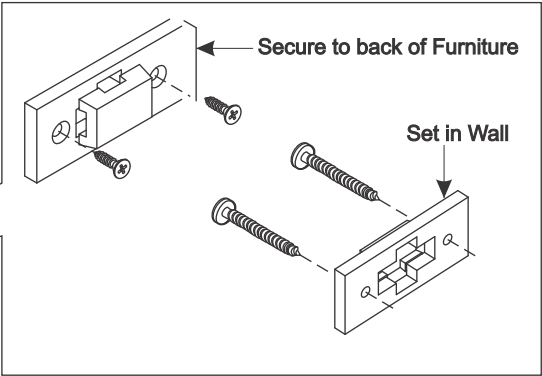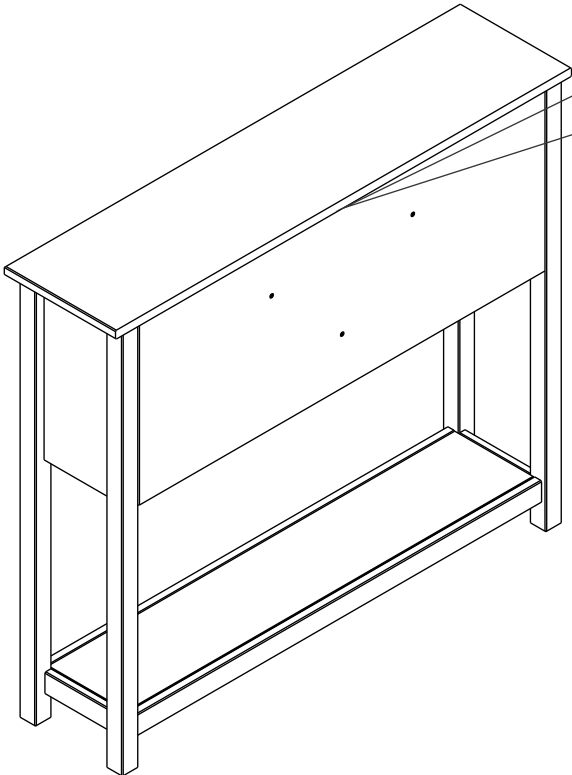

Secure to Stud behind Wallboard!

